



DetectaTape[®]


Farington Mill, Centurion Industrial Estate,
Centurion Way, Leyland, PR25 4GU
T: 01772 434444 E: sales@customtape.co.uk

INSTALLATION GUIDE



Here is our step by step guide to the installation of your underground detectable warning tape.

Please note that conditions may differ depending upon the job at hand.
This is an illustrated guide for reference only.

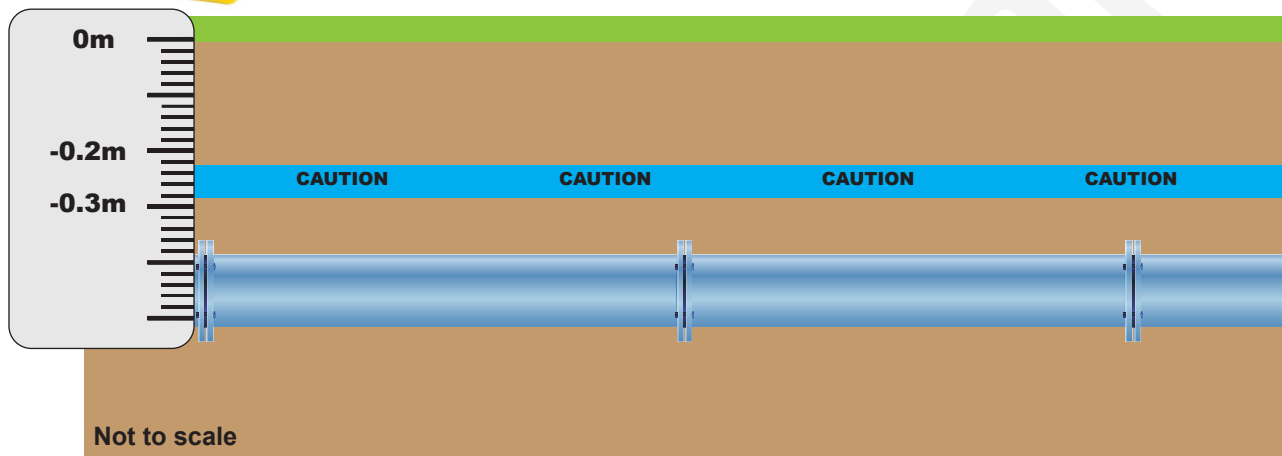

Step 1

It is recommended that you install the tape **no more** than 30cm below ground level. Leaving a gap between the pipe/cable of approx 30cm again.

Step 2

Unroll the detectable tape onto the backfill in the cable trench or utility trench ensuring that it is earthed at both ends.

Step 3

Join the wires or cut lengths of the tape using crimps.

Step 4

Backfill the trench further to the surface.

Step 5

The detectable tape can be detected up to 30-40cm below the ground level.

Step 6

Please consult your device manufacture/handbook for further details of the exact depth your equipment can locate to for maximum result.

